

## Norpass - Controller Setup, Two Door, Read-in, Read-out, Maglock

### Application:


Set-up and configuration of 2 doors with read-in and read-out on each door (parallel readers).

### Scope

This note describes how to configure access control for two doors using both reader interfaces on a CRC220 PCB. Each reader interface serves one door for both entry and exit. Features such as anti-timeback, 'buddy mode' and 'Card and PIN' may be applied to the door but are not covered here. Separate application notes are available for setting these features.

**NOTE:** Using the same reader interface for both entry and exit makes it impossible to determine in which direction the cardholder is passing through the door. For this reason, areas and user location functions cannot be used.

### Hardware Configuration

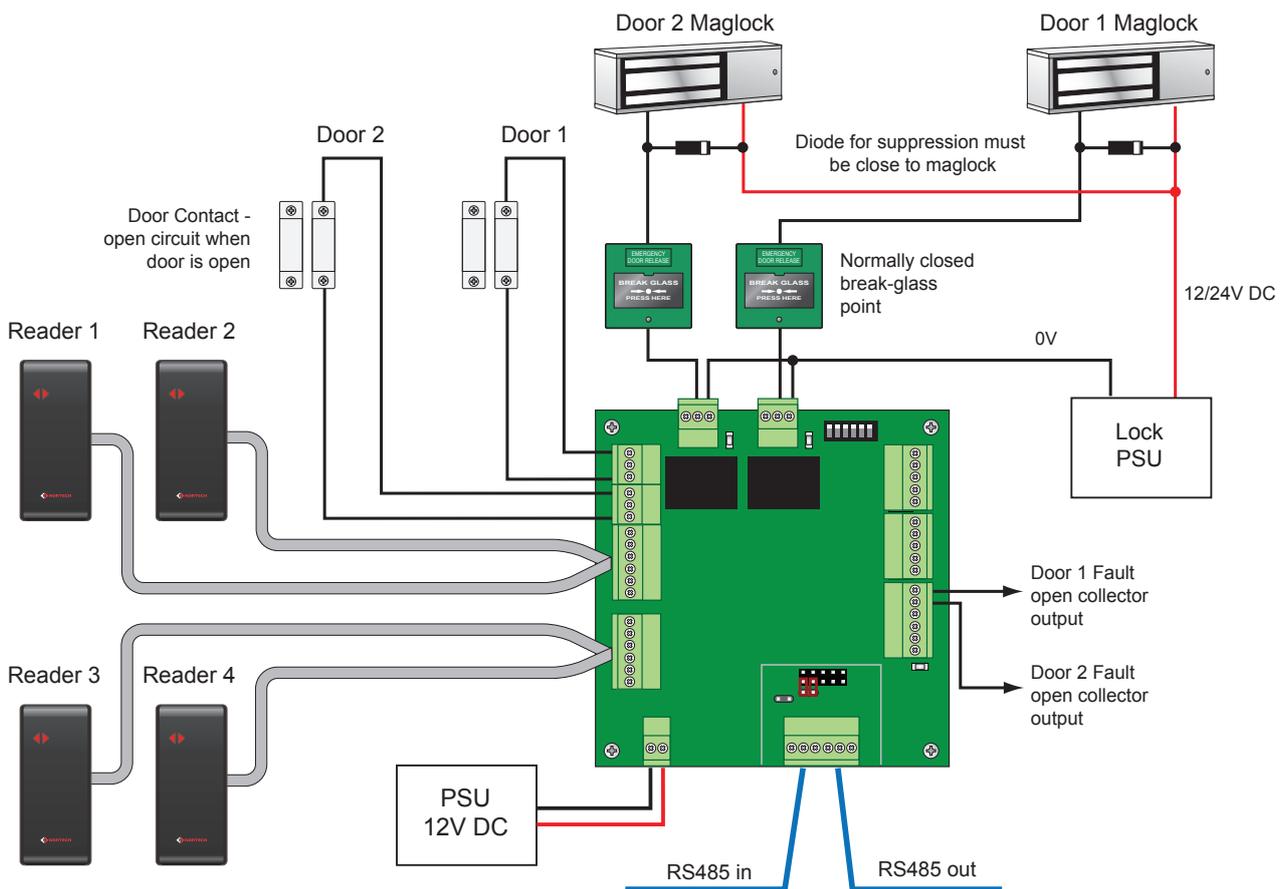

\* See Application Note AN-0525 for reader connections

### Notes:


1. The maglock power rating must not exceed 30V, 1A.
2. Failure to fit suppression at the lock could result in failure of the system. The potential faults include problematic communications, memory loss, erratic system behaviour and permanent damage to the relays. These faults will not be covered by our standard warranty.
3. For details of wiring the alarm output, RS485, arming, fire alarm or reader, please see the relevant application notes or manuals.
4. The PSU enclosure and mains connection have been omitted for clarity.

## Set-up

Log on to Norpass3 with installer rights. Select 'Controllers' from the 'Installer' menu.


**Note:** If the controller has already been enabled, you have the option to right-click the associated icon in left pane of the main screen and then select 'controller set-up'.

Select 'Edit Controller' and then carry out the following:

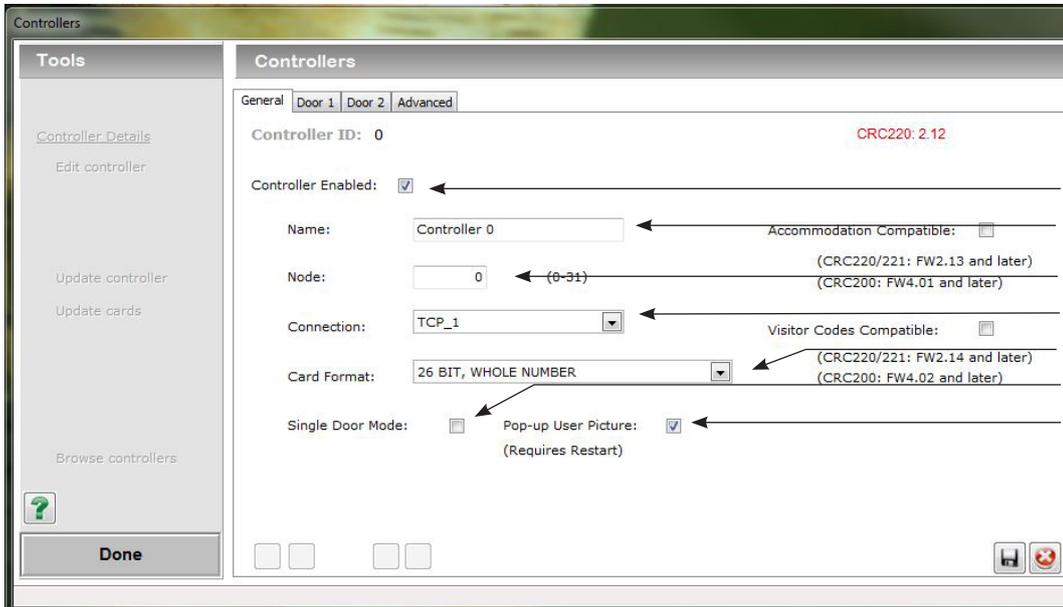

- Enable the controller
- Give it a meaningful name
- Set the node (if required)
- Choose the communication port
- Select the card format
- Do 'not' select 'Single door mode'
- Picture pop-up can be selected if required

Select 'Door 1' tab:

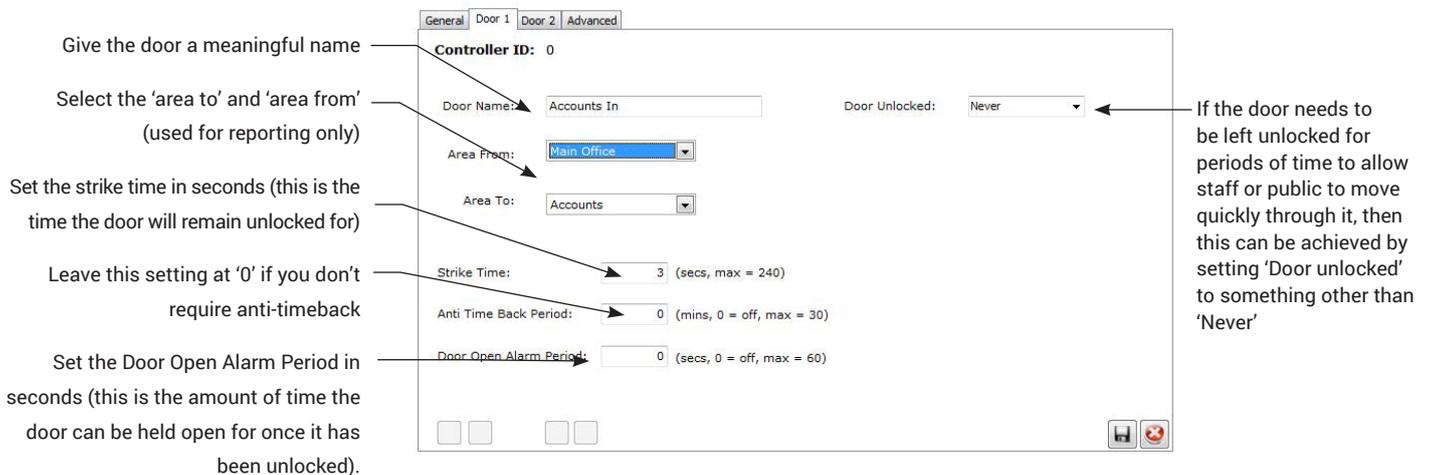

- Give the door a meaningful name
- Select the 'area to' and 'area from' (used for reporting only)
- Set the strike time in seconds (this is the time the door will remain unlocked for)
- Leave this setting at '0' if you don't require anti-timeback
- Set the Door Open Alarm Period in seconds (this is the amount of time the door can be held open for once it has been unlocked).
- If the door needs to be left unlocked for periods of time to allow staff or public to move quickly through it, then this can be achieved by setting 'Door unlocked' to something other than 'Never'

Select 'Door 2' tab and repeat the process. Do not configure any of the settings under the 'Advanced' tab, but check that the 'Anti-passback' box is not ticked. Also check that the 'Buddy Mode' box is not ticked if the feature is not required. If you do wish to configure any advanced features, refer to the associated application notes.

Save the settings and exit the 'Controllers' window. If the controller is online, this will update the controller automatically. If the controller is not currently online, you will need to return and click 'update controller' when it is online.

### Related Application Notes:

AN-0525-Connecting Nortech Readers